AUDIO ADAPTER

CONNECT TO

HEADSET

SOCKET

AUDIO SOCKET

Fulbrook Lane, Sherbourne, Warwick, CV35 8AR, ENGLAND

Tel: 01926 624800 Fax: 01926 624900


REF: E028-1 17-05-08

INSTALLATION INSTRUCTIONS

The Audio Adapter allows up to three separate audio devices to be connected to a Lynx Micro System headset.

The adapter can be used with Lynx Audio Input/Output Leads, Audio Output Leads or Mobile Telephone Leads. The leads may be used in any combination.

For connection to recording devices, the adapter provides output at Microphone level (with Audio Input/Output Lead) or Line Level (with Audio Output Lead).

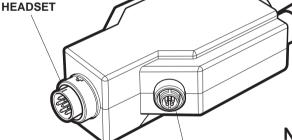

AUDIO SOCKET

CONNECT TO AUDIO INPUT/OUTPUT LEAD, AUDIO OUTPUT LEAD OR MOBILE TELEPHONE LEAD **NOTE:**When connected to a single headset, a Headset Switching Adapter must be used to switch-on the assembly.

AUDIO SOCKET

If a second headset is connected directly to the Audio Adapter using a Coupling Adapter, the second headset will not transmit when using a telephone.

IMPORTANT

CONNECT TO

READ THIS INFORMATION CAREFULLY BEFORE ATTEMPTING TO USE THIS ITEM OF EQUIPMENT